## Special Key:

A Special Key is available for locking or unlocking the connection plugs in the control units. Individual plugs are locked or unlocked and the corresponding grommet on the plug-in points is removed on dismantling with the aid of this key. This key must be used carefully so that no damage occurs.

